





TPW



12TPWNV_VALVE_MOUNTING_GUIDE_R2

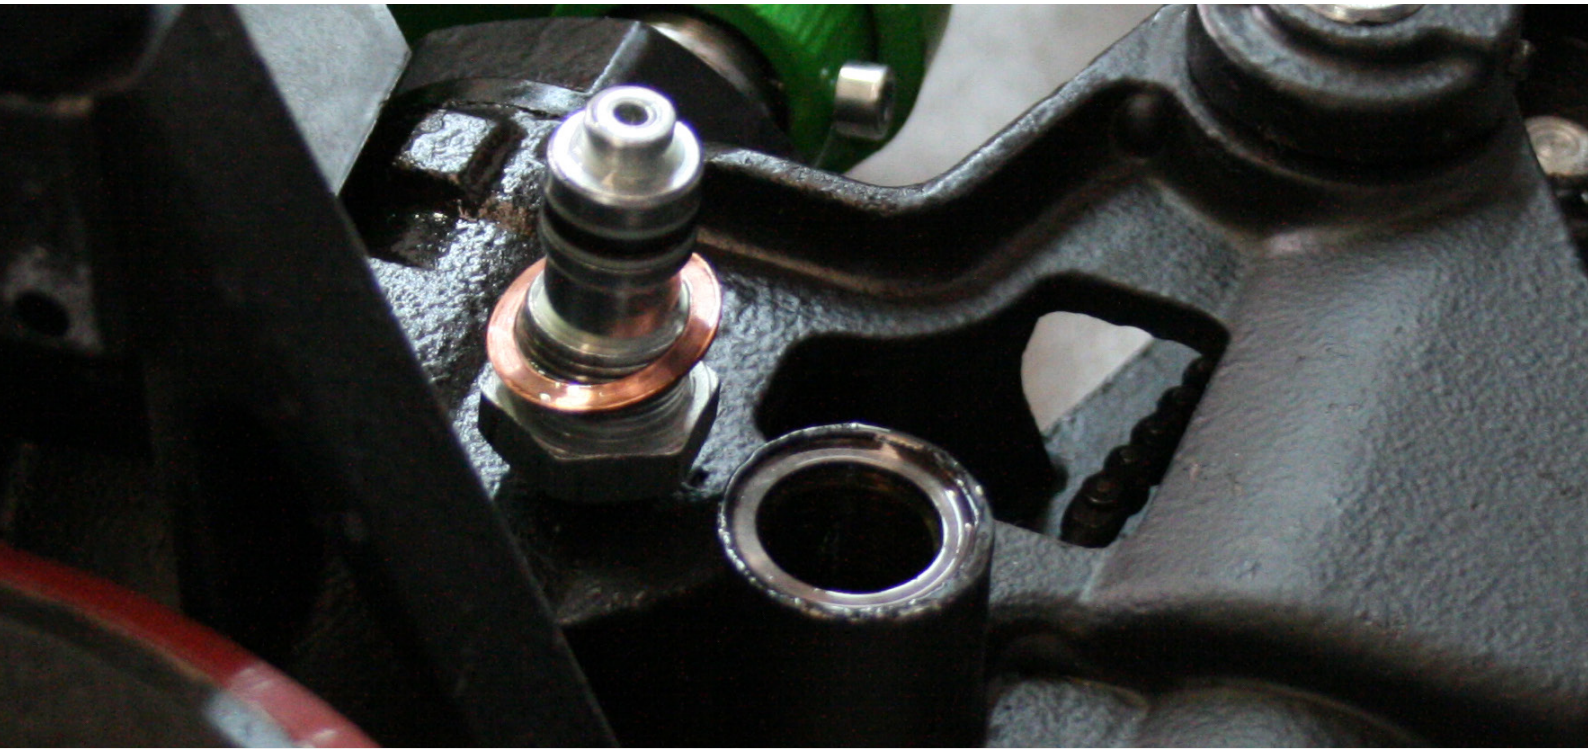





HOW TO REMOVE THE OLD VALVE

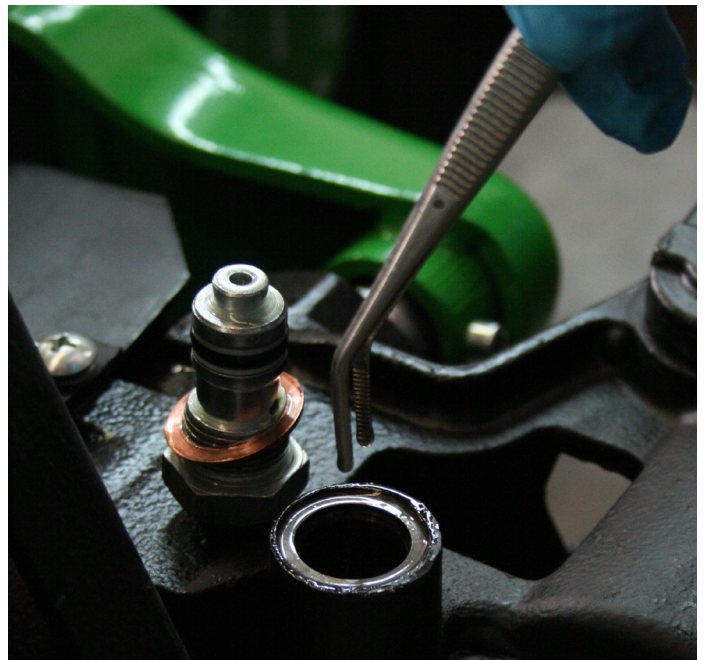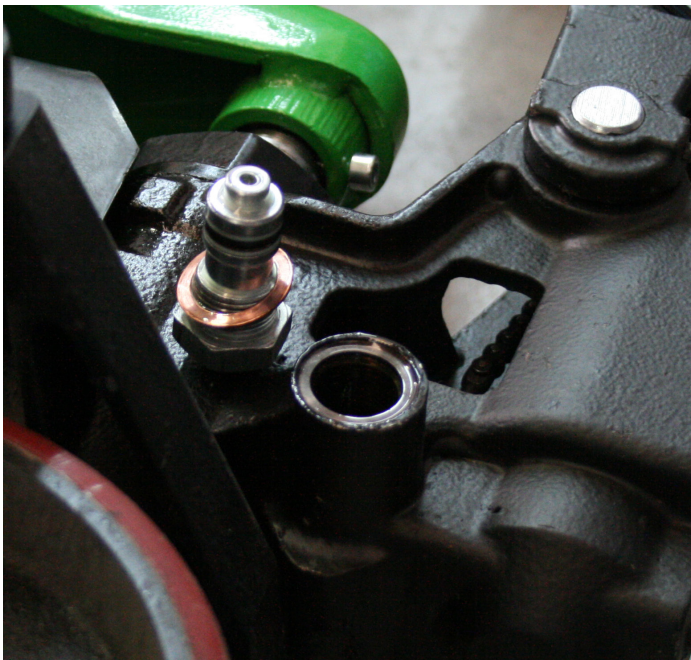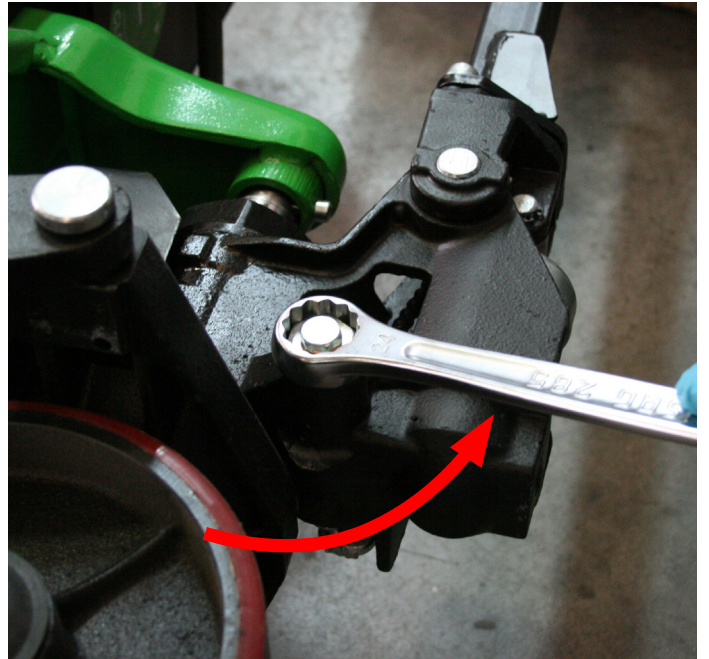

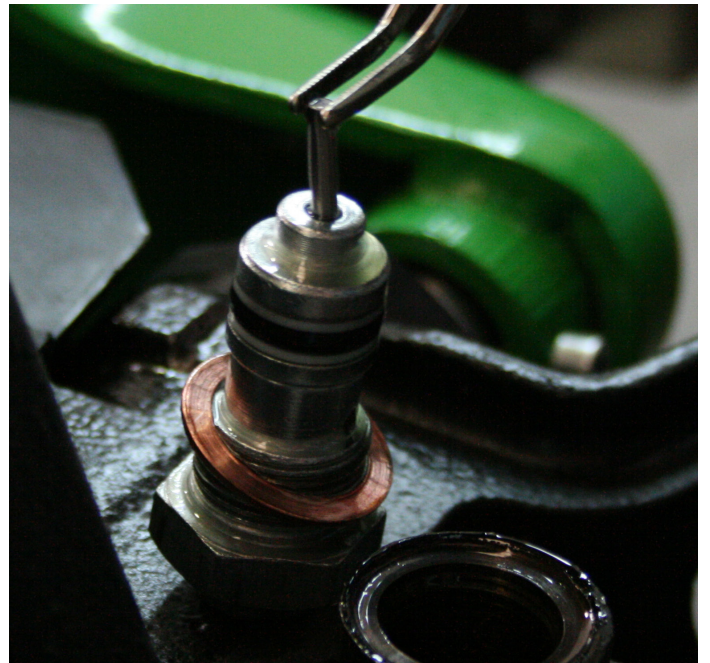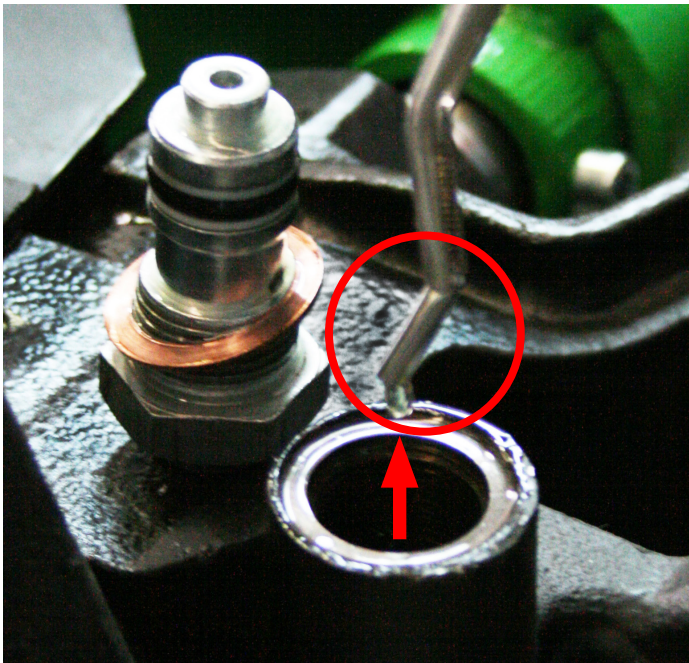

HOW TO INSERT THE NEW VALVE



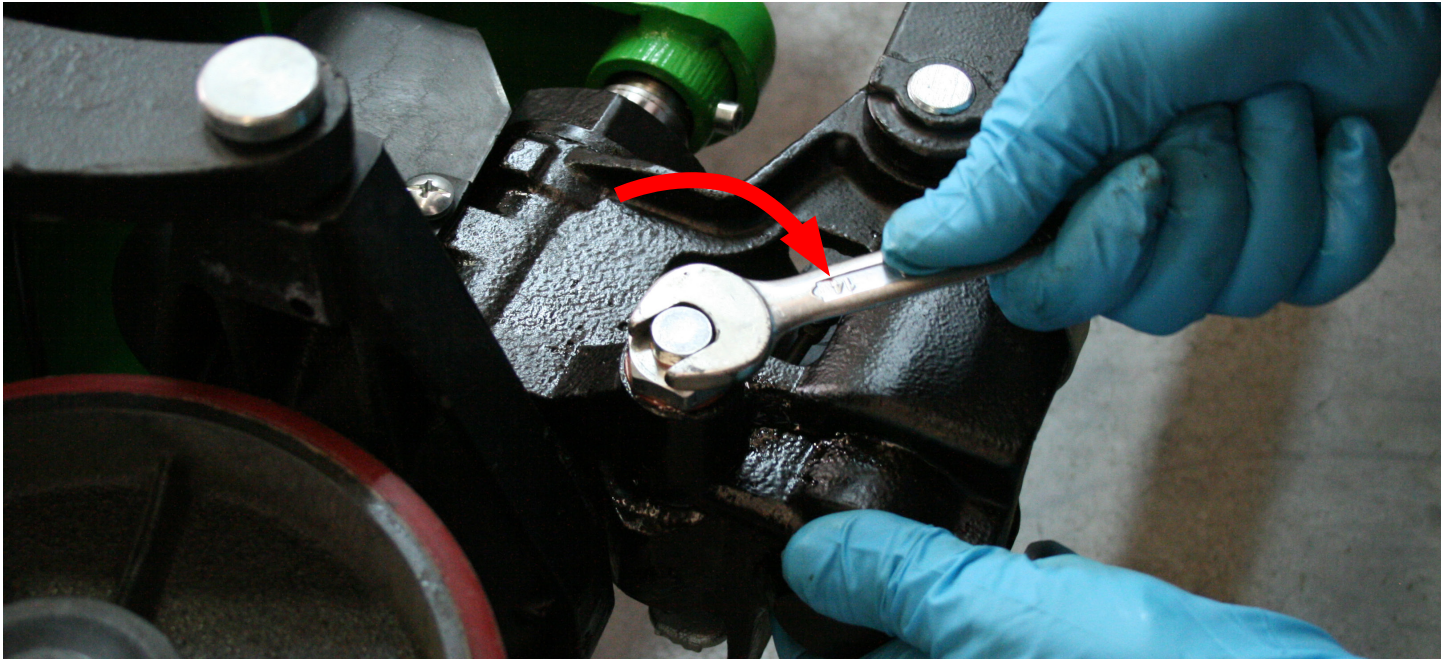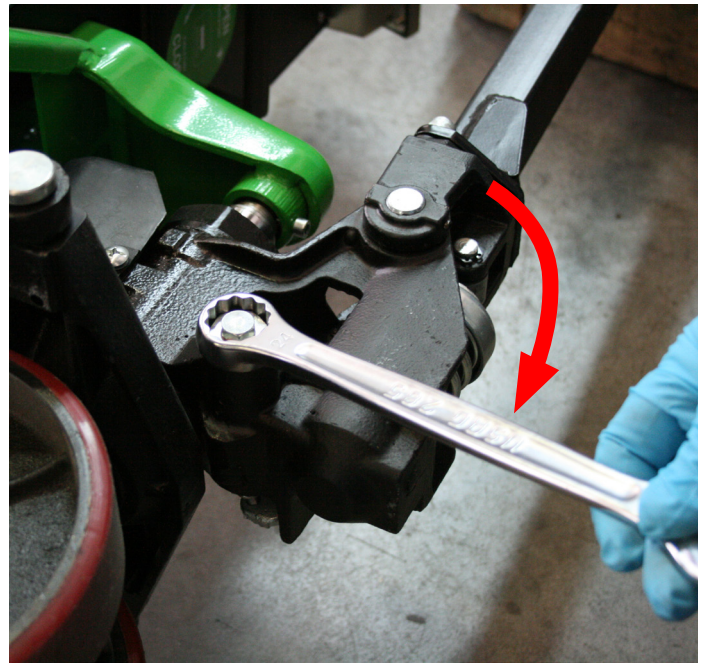

**HEAD OFFICE**

Via Della Fisica, 20
41042 Spezzano di Fiorano, Modena - Italy
Tel. +39.0536 843418 - Fax +390536 843521
info@diniargeo.com

SERVICE ASSISTANCE

Via Dell'Elettronica, 15
41042 Spezzano di Fiorano, Modena - Italy
Tel. +39.0536 921784 - Fax +390536 926654
service@diniargeo.com